



# Rock-Ola Techna Retrofit Kit Installation Guide

This Kit contains:

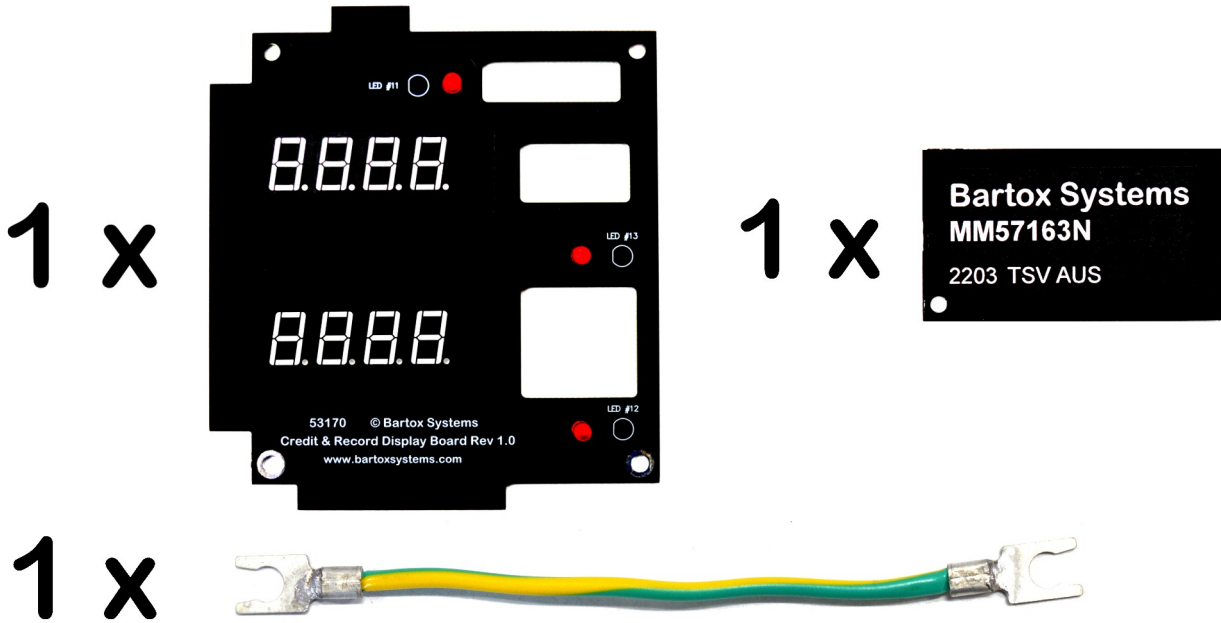


## Display Installation

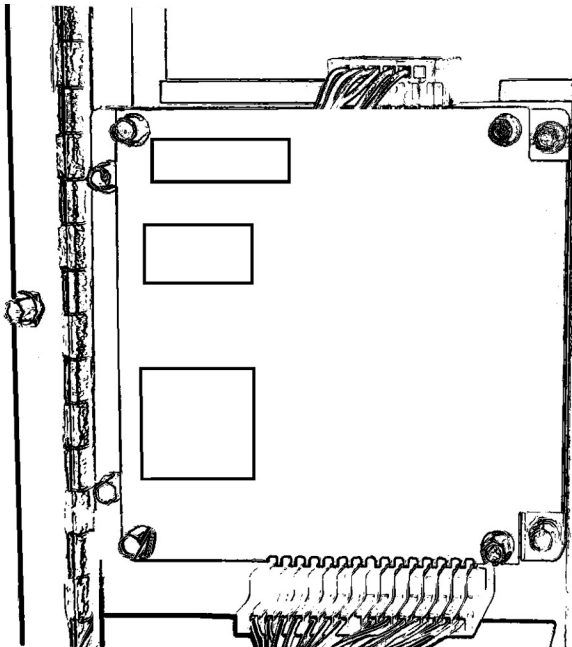


Open the display door to show the back of the Display Board.

Remove the top and bottom plugs from the old Display board

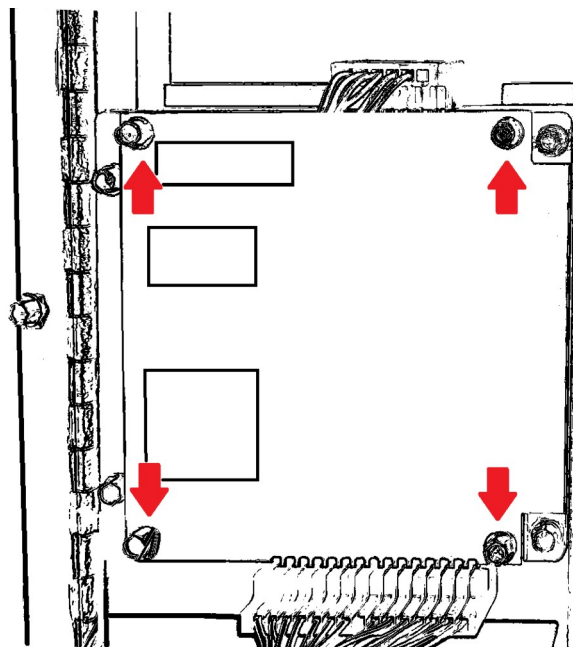


Remove only the screws indicated by the arrows.

Remove the old display board.

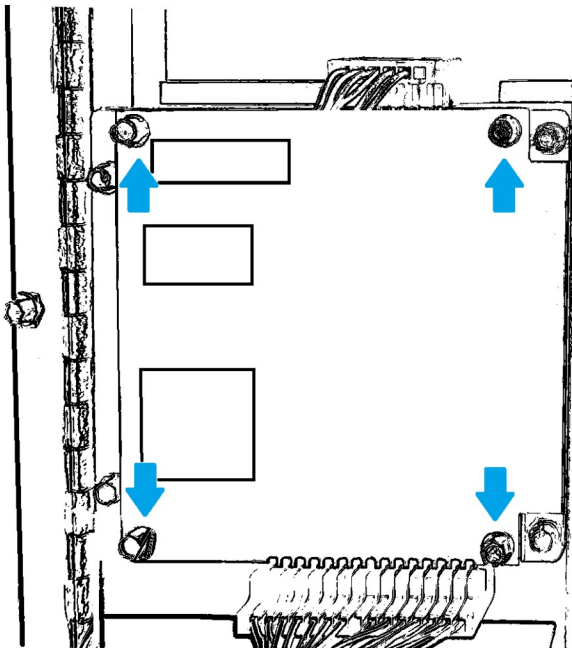


Install the new display board, reinstalling the screws  
Reconnect the top and bottom display connectors

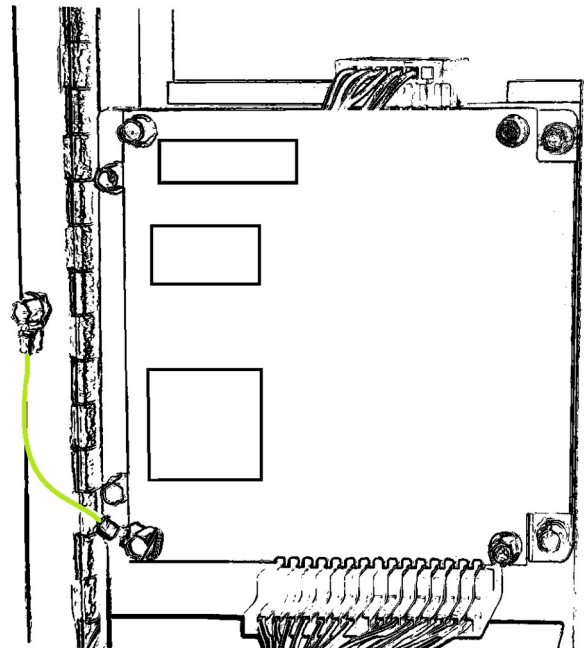


Attach the earth cable to the display door hinge and the earth point on the display board as shown. (this is required for the display to function)

**MM57163N Installation.**  
Please note the location of Pin 1.

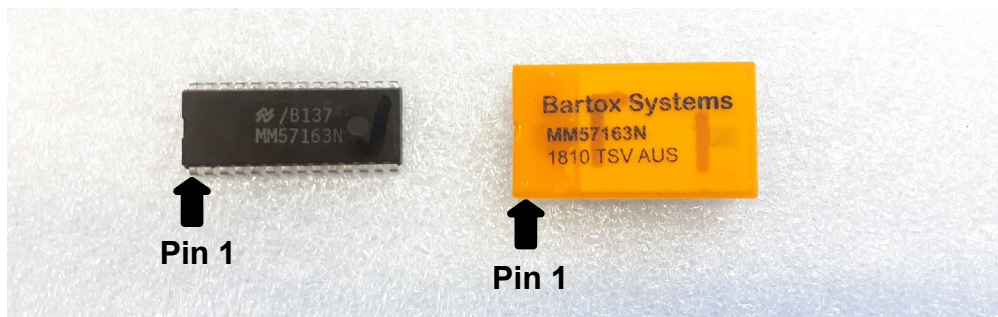


Locate the Profit Setter module (Credit Unit).  
The installation method differs depending on the version of Credit Unit that is installed and the model of Jukebox.


# Profit Setter 52455

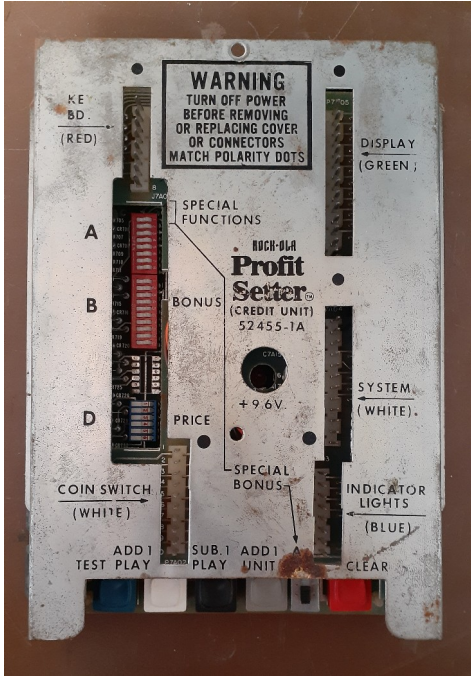


Take the Credit unit out of the Jukebox and remove the top cover.

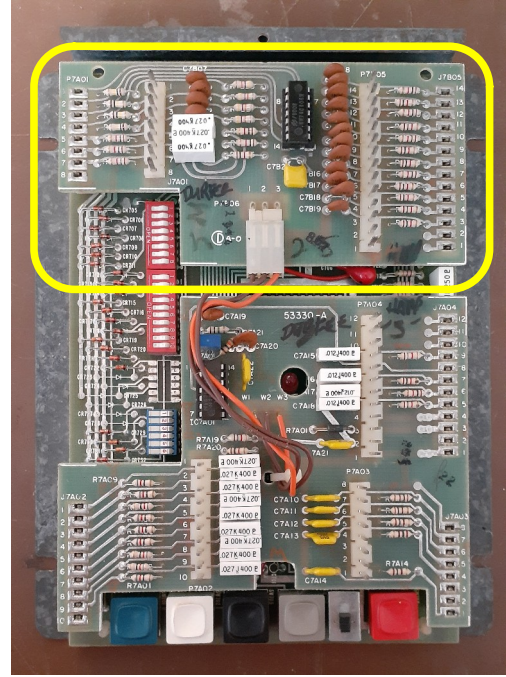

Remove the top rider to expose the board underneath.

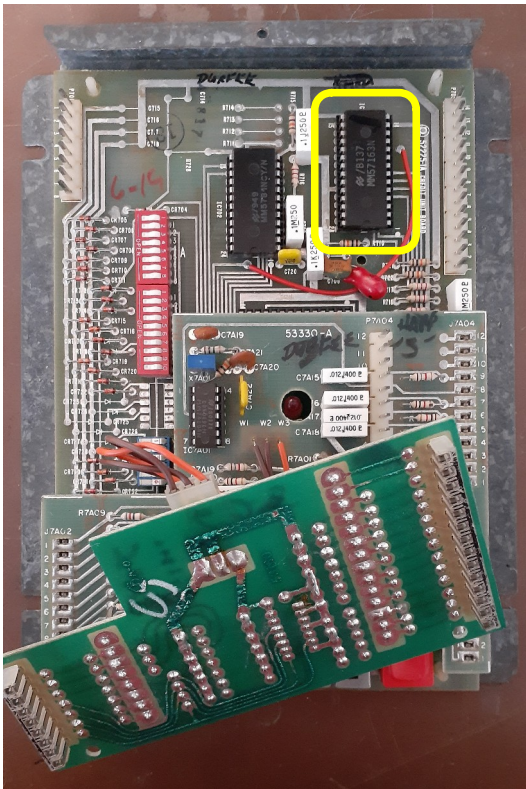


Remove the old MM57163N and install the new one.

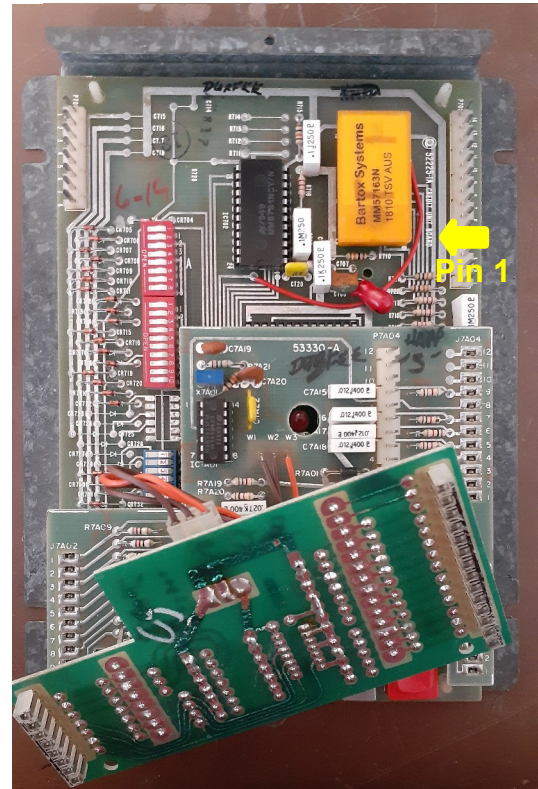


Note the orientation and location of Pin 1

Reassemble and reinstall the credit unit into the Jukebox.


# Profit Setter 53360

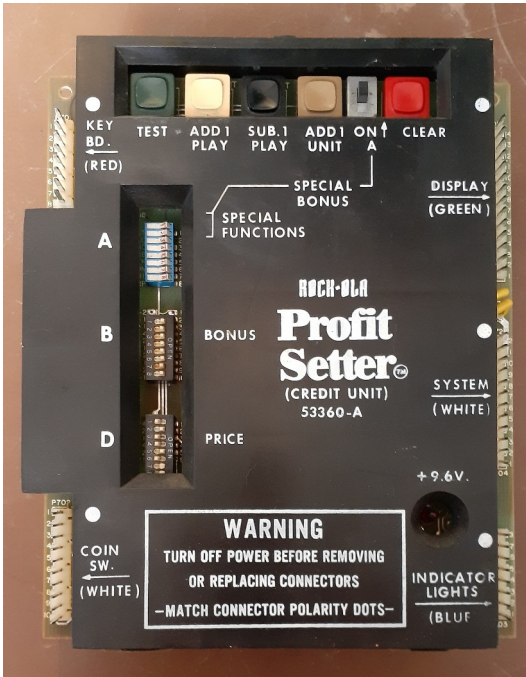

Take the Credit Unit out of the Jukebox and remove the top cover.

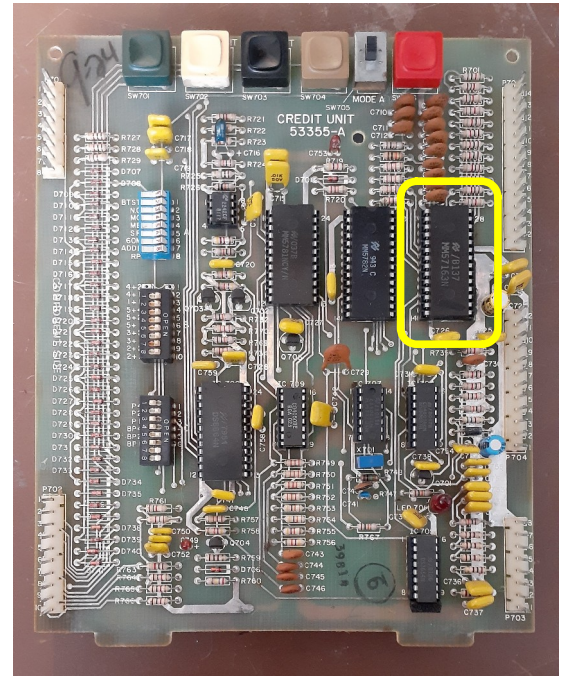

Remove the old MM57163N and install the new one.

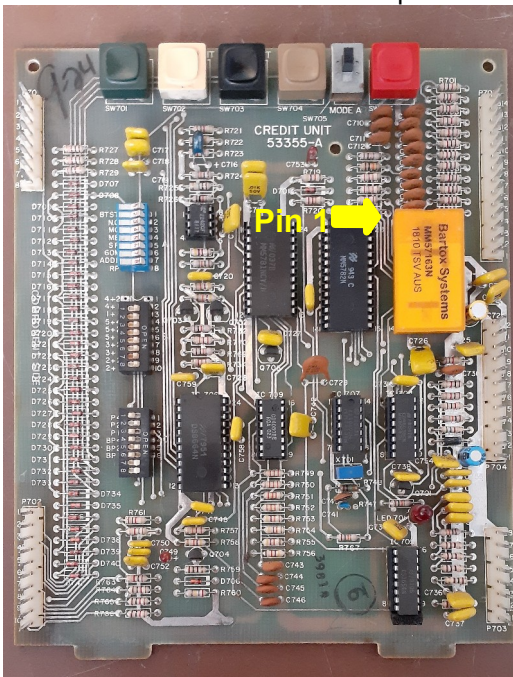

Note the orientation and location of Pin 1.

Reassemble and reinstall the credit unit into the Jukebox.

## Testing

Power on the Jukebox and make a selection.



(Models 476, 480, 484, 488)



(Models 477, 478, 481, 483)

Your Jukebox should now display credits and selections.

Installation will differ slightly for a Grand Saloon II as the display is mounted in the top door of the jukebox.

## Troubleshooting

Symptom	Action
None of the displays operate	<ul style="list-style-type: none"><li>• Check that the MM57163N is installed with the correct orientation.</li><li>• Recheck and re-seat all plug-in connectors.</li><li>• Make sure that display earth is connected to Jukebox earth.</li></ul>
One entire digit does not operate	<ul style="list-style-type: none"><li>• Check the plugs of the display board for a bad connection.</li><li>• Check that the green display plug on the Credit Unit is plugged in correctly.</li></ul>
The same segment is missing on every number.	<ul style="list-style-type: none"><li>• Check and re-seat the MM57163N on the Credit Unit.</li><li>• Check that the green display plug on the Credit Unit is correctly connected.</li></ul>